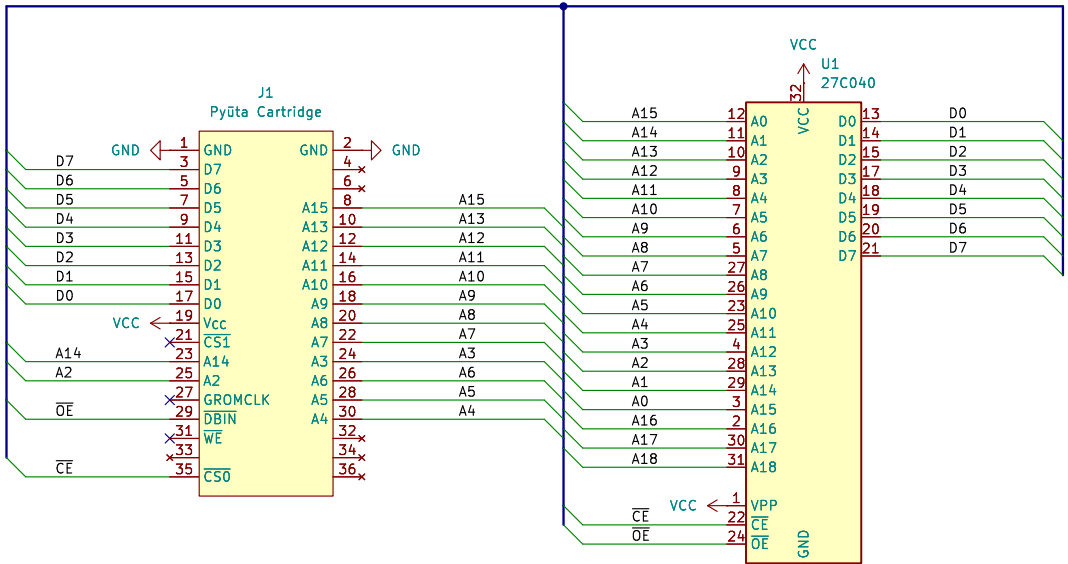


Bank	Start Address	A18	A17	A16	A15	A14	SW1	SW2	SW3	SW4	SW5
0	0x00000	0	0	0	0	0	ON	ON	ON	ON	ON
1	0x04000	0	0	0	0	1	ON	ON	ON	OFF	ON
2	0x08000	0	0	0	1	0	ON	ON	OFF	ON	ON
3	0x0C000	0	0	0	1	1	ON	ON	OFF	OFF	ON
4	0x10000	0	0	1	0	0	ON	ON	ON	ON	OFF
5	0x14000	0	0	1	0	1	ON	ON	ON	OFF	OFF
6	0x18000	0	0	1	1	0	ON	ON	OFF	ON	OFF
7	0x1C000	0	0	1	1	1	ON	ON	OFF	OFF	OFF
8	0x20000	0	1	0	0	0	ON	OFF	ON	ON	ON
9	0x24000	0	1	0	0	1	ON	OFF	ON	OFF	ON
10	0x28000	0	1	0	1	0	ON	OFF	OFF	ON	ON
11	0x2C000	0	1	0	1	1	ON	OFF	OFF	OFF	ON
12	0x30000	0	1	1	0	0	ON	OFF	ON	ON	OFF
13	0x34000	0	1	1	0	1	ON	OFF	ON	OFF	OFF
14	0x38000	0	1	1	1	0	ON	OFF	OFF	ON	OFF
15	0x3C000	0	1	1	1	1	ON	OFF	OFF	OFF	OFF
16	0x40000	1	0	0	0	0	OFF	ON	ON	ON	ON
17	0x44000	1	0	0	0	1	OFF	ON	ON	OFF	ON
18	0x48000	1	0	0	1	0	OFF	ON	OFF	ON	ON
19	0x4C000	1	0	0	1	1	OFF	ON	OFF	OFF	ON
20	0x50000	1	0	1	0	0	OFF	ON	ON	ON	OFF
21	0x54000	1	0	1	0	1	OFF	ON	ON	OFF	OFF
22	0x58000	1	0	1	1	0	OFF	ON	OFF	ON	OFF
23	0x5C000	1	0	1	1	1	OFF	ON	OFF	OFF	OFF
24	0x60000	1	1	0	0	0	OFF	OFF	ON	ON	ON
25	0x64000	1	1	0	0	1	OFF	OFF	ON	OFF	ON
26	0x68000	1	1	0	1	0	OFF	OFF	OFF	ON	ON
27	0x6C000	1	1	0	1	1	OFF	OFF	OFF	OFF	ON
28	0x70000	1	1	1	0	0	OFF	OFF	ON	ON	OFF
29	0x74000	1	1	1	0	1	OFF	OFF	ON	OFF	OFF
30	0x78000	1	1	1	1	0	OFF	OFF	OFF	ON	OFF
31	0x7C000	0	0	0	0	0	OFF	OFF	OFF	OFF	OFF